

REPLACING THE REMOTE CONTROL BATTERY

PurePal[®] Series
(Models: AG800, AG850, AG900, and AG950)





REPLACING THE REMOTE CONTROL BATTERY

1. Open the battery compartment by pressing the small lever to the side and slide the battery compartment out.
2. Remove the used battery.
3. Insert the new battery (Lithium coin battery 3V).



Be sure that the (+) and (-) are correct.

Note: Rechargeable batteries are not compatible with the remote control.

